



MUSIC GENii MUSICDISK USER MANUAL



What you get with your package

- USB Pen
- MUSIC GENii battery adapter / USB Pen holder
- Stereo headphones
- AAA Battery
- 8cm CD with drivers



Power supply

- AAA Battery required for MP3 player
- USB power when connected to PC

Product Specifications

- MP3 decoding: MPEG1/2 Layer 3 32K to 320K bps
- Stereo output 32 Ohms
- 15mW+15mW (max)
- Frequency response: 20 to 20,000 Hz, +0/-1dB;
- s/n: <85dB
- USB Ver 1.1 Mass storage device (USB 2.0 compatible)
- Compact size 8cm x 3cm x 2cm with casing
- Full digital control

Functionality

Mode select switch


| Switch | Bass (Left) | MP3 (Middle) | DISK (right) |
|------------|-------------|--------------|--------------|
| USB Disk | Read only | Read only | Read / Write |
| MP3 Player | Bass boost | Normal | Normal |

LED Indicator

| LED | Always on | Flashing | Off |
|------------|-------------------|----------|--------------------|
| MP3 Player | Low power | Playing | Off / No Mp3 files |
| USB Disk | Reading / Writing | Idle | Fail |

Important: Please remove the battery when the MP3 player is not in use.

Product Information

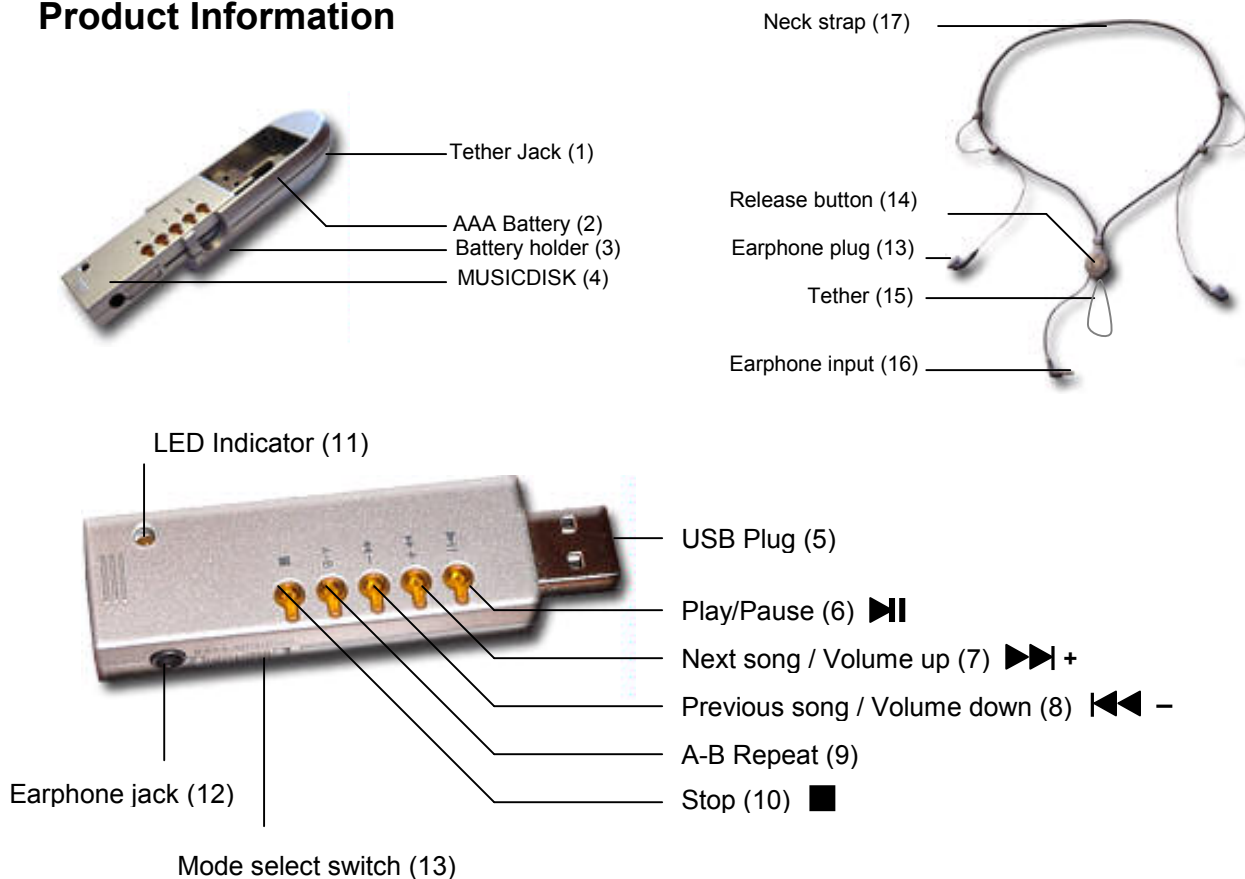

1. Tether Jack on the battery box. Loop the tether (15) through here.
2. AAA Battery
3. Battery Holder: Slide the MUSICMAN (4) into the battery box when used as an MP3 player.
4. MUSICMAN: USB Disk and MP3 player when inserted into the battery holder (3)
5. USB Plug: Connects to the computer's USB port.
6. Play and Pause
7. a) Forward button: Press the button once to forward to the next track
b) Volume up: Hold button down to increase the volume
8. a) Backward button: Press the button once to play the previous track
b) Volume down: Hold the button down to decrease volume
9. A-B Repeat: Press once to set the start point, press again to set the end point. The section of music or tracks will repeat. Press again to clear.
10. Stop: Stop and power off.
11. LED indicator
12. Earphone jack
13. Mode select: Bass / MP3 / Disk
14. Release button: Release the tether from the Neck strap.
15. Tether: Loop through the tether jack (1)
16. Earphone input: Connect to the Earphone jack (12)
17. Neck strap: Loops around your neck.



OPERATION

The device has two functions:

- Portable USB Storage device
- Portable MP3 Player

USB Storage device

The MUSICMAN can be used as a portable USB storage device (USB1.1). The MUSICMAN is plug and play in Windows me, 2000 and XP. Other device drivers are available on the CD supplied with the device, or from our web site.

The Mode select switch (13) has the following functions when the device is used as a storage device:

| Switch | Bass (Left) | MP3 (Middle) | DISK (right) |
|----------|-------------|--------------|--------------|
| USB Disk | Read only | Read only | Read / Write |

The LED indicator (11) shows the following status when the device is used a storage device:

| LED | Always on | Flashing | Off |
|----------|-----------------|----------|------|
| USB Disk | Reading/writing | Idle | Fail |

To ensure that you do not lose data, check that the LED is flashing and not always on before unplugging the USB device from you computer.

The MP3 function keys (6 to 10) do not do anything when the device is used as a storage device.

MP3 Player

Plug the device into your USB port and drag and drop your MP3 files straight into the MUSICMAN drive. Unplug it from your computer and plug it into the battery holder. Connect the earphone input (16) into the earphone jack (12).

Press the play button. Refer to the above [product information](#) for details on how to control the MP3 player.

The mode select switch (13) has the following functions in MP3 player mode:

| Switch | Bass (Left) | MP3 (Middle) | DISK (right) |
|------------|-------------|--------------|--------------|
| MP3 Player | Bass boost | Normal | Normal / Off |

The LED indicator (11) shows the following status when the device is used as an MP3 player.

| LED | Always on | Flashing | Off |
|------------|-----------|----------|--------------------|
| MP3 Player | Low power | Playing | Off / No Mp3 files |



PRECAUTIONS and ADVISORIES

1. The device does not play WMA files.
2. Remove the battery or unplug the MUSICMAN (4) from the battery holder (4) when the device is not being used as an MP3 player. This will ensure that battery life is preserved.
3. Store the device in a dry place away from sunlight. Do not wet the device.
4. Keep the device away from heat.
5. Replace the battery when the battery is flat to avoid battery acid leakage.
6. Rechargeable batteries are recommended if the device is used frequently as an MP3 player.
7. Formatting the USB storage device: The device is already formatted but if re-formatting is required for any reason, the device must be formatted using FAT or another file systems that works with small storage devices. Do not format using NTFS or FAT32 as this will cause errors. This is an operating system limitation.
8. Always pay attention to your surroundings when listening to music in public, in the street or on the road.