

EHS35 Wireless Headset Adapter

Introduction

The new and advanced Yealink Headset Adapter EHS35 provides a technical interface between your Yealink IP phones (T3X series) and a compatible Yealink wireless headset (WH62/WH63).



The unit is easy to install; simply link EHS35 to the RJ9 (4P4C) headset port of the phone. Its plug-and-play effectively gives you the ability to remotely control your Yealink phone calls, including answering, rejecting, holding, muting, hanging up, switching between multiple calls, and adjusting the volume.

Key Features

- Support Yealink wireless headset (WH62/WH63) only
- Control phone through wireless headset
- Plug and play
- Easy to use

Compatibility


For more information, please refer to [EHS35 Compatibility List](#).

Connection

The WH62/WH63 headset version must be 104.434.0.15 or later. You can check out the headset version via Yealink USB Connect (PC).

Download from [Yealink USB Connect](#).


- Mitel & Unify Phone

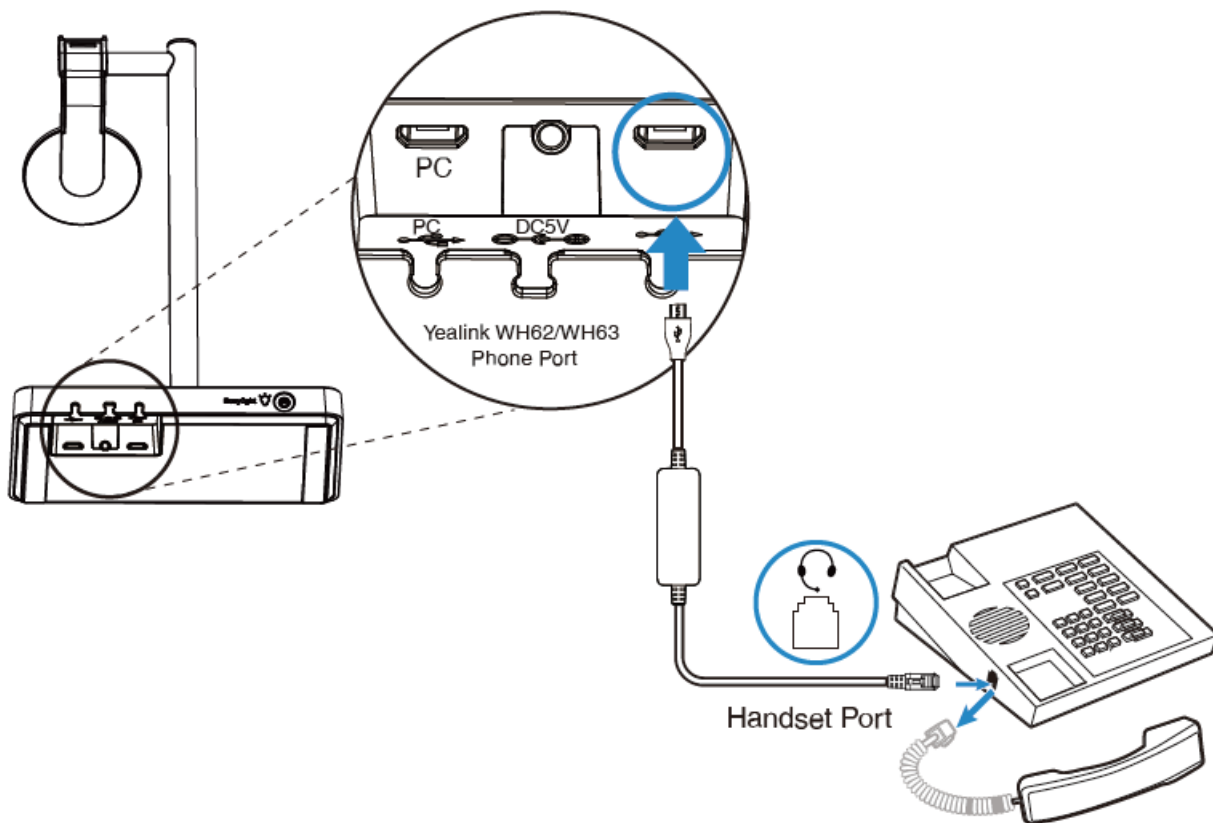

You need to do the following on the WH62/WH63:

1. Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
2. After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.
3. The call can only be controlled on the IP phone.

- Avaya/Poly/GS/Fanvil/Snom IP Phone

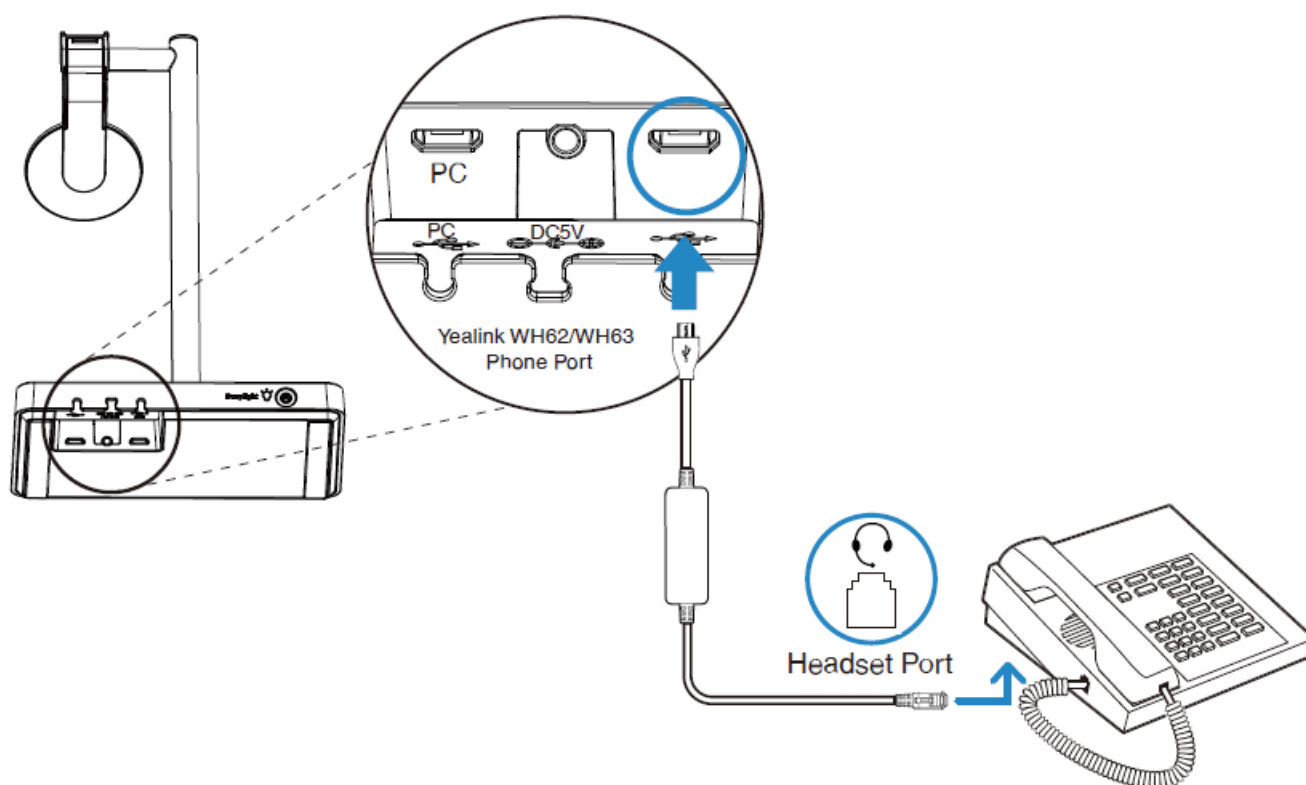


You need to do the following:

Step 1: For IP Phones, you need to press the **PC** button on the phone to set the audio device as a headset. The call can only be controlled on the IP phone.

Step 2: For WH62/WH63:

- Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
- After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.

- Yealink IP Phone

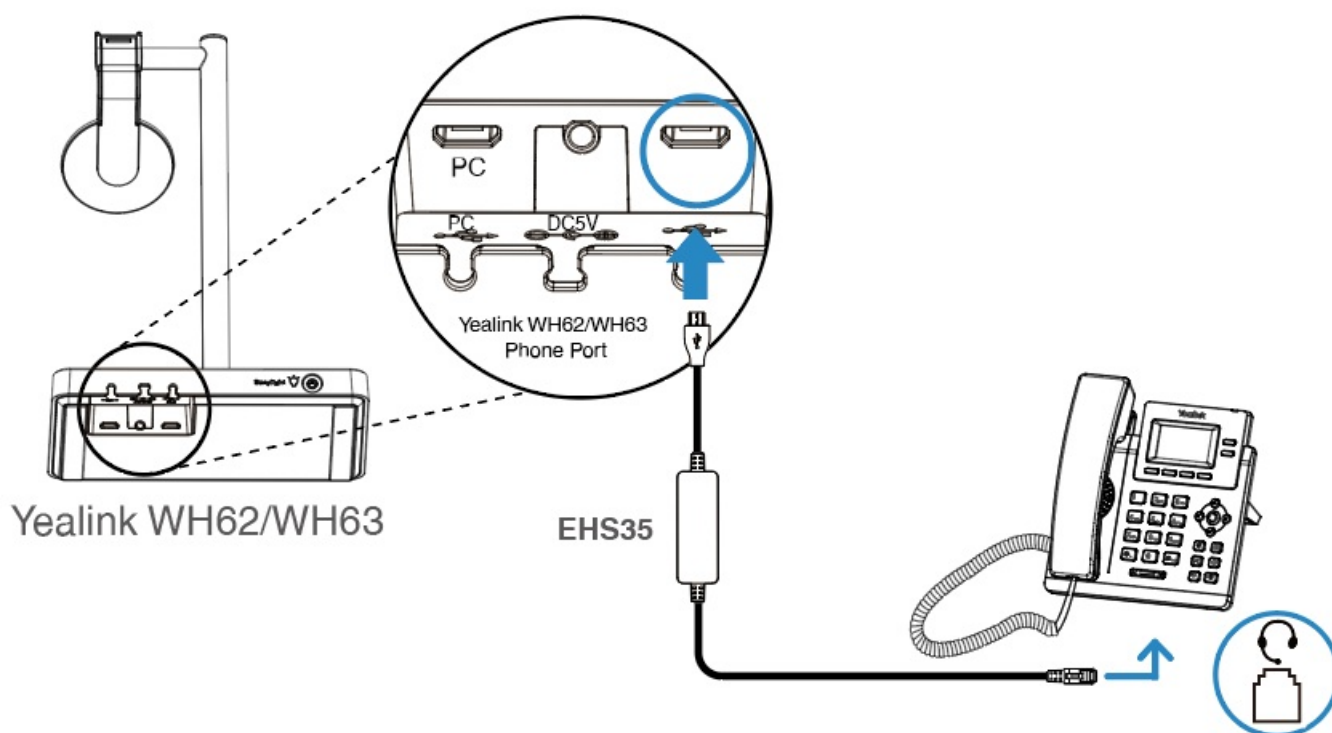

You need to do the following:

Step 1: For IP Phones, you need to press the **PC** button on the phone to set the audio device as a headset. The call can only be controlled on the IP phone.

Step 2: For WH62/WH63:

- Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
- After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.

NOTE

If it is connected to a T3X series IP phone, the WH62/WH63 can directly control the call.

We recommend updating the T3 series phones to the latest firmware version. For more details, please scan the QR code.



For more information, please refer to [EHS35/EHS60/EHS61 Wireless Headset Adapter Guide](#).

NOTE

- Connect Yealink T3X series phones: EHS35 supports WH62/WH63 to control phone calls and transmit audio.
- Connect Yealink T58, T67LTE, T4XS, T4XU, T5XW, T2XG, T4XG, VP59, MP5X phones: EHS35 can only transmit audio.
- Please update the phone to the latest firmware version.